

RFTOOLS

Tabela de programação de frequência com prescaller MC12017

	SW1								SW2							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
87,5	1	0	1	1	0	1	0	0	1	0	1	1	1	0	1	1
87,7	1	0	1	1	0	1	1	1	1	1	0	1	1	0	1	1
87,9	1	0	1	1	0	1	0	1	0	1	0	1	1	0	1	1
88,1	1	0	1	1	0	1	1	0	1	0	0	1	1	0	1	1
88,3	1	0	1	1	0	1	0	0	0	0	0	1	1	0	1	1
88,5	1	0	1	1	0	1	1	1	0	1	1	0	1	0	1	1
88,7	1	0	1	1	0	1	0	1	1	0	1	0	1	0	1	1
88,9	1	0	1	1	0	1	1	0	0	0	1	0	1	0	1	1
89,1	1	0	1	1	0	1	0	0	1	1	0	0	1	0	1	1
89,3	1	0	1	1	0	1	1	1	1	0	0	0	1	0	1	1
89,5	1	0	1	1	0	1	0	1	0	0	0	0	1	0	1	1
89,7	1	0	1	1	0	1	1	0	1	1	1	1	0	0	1	1
89,9	1	0	1	1	0	1	0	0	0	1	1	1	0	0	1	1
90,1	1	0	1	1	0	1	1	1	0	0	1	1	0	0	1	1
90,3	1	0	1	1	0	1	0	1	1	1	0	1	0	0	1	1
90,5	1	0	1	1	0	1	1	0	0	1	0	1	0	0	1	1
90,7	1	0	1	1	0	1	0	0	1	0	0	1	0	0	1	1
90,9	1	0	1	1	0	1	1	1	1	1	1	0	0	0	1	1
91,1	1	0	1	1	0	1	0	1	0	1	1	0	0	0	1	1
91,3	1	0	1	1	0	1	1	0	1	0	1	0	0	0	1	1
91,5	1	0	1	1	0	1	0	0	0	0	1	0	0	0	1	1
91,7	1	0	1	1	0	1	1	1	0	1	0	0	0	0	1	1
91,9	1	0	1	1	0	1	0	1	1	0	0	0	0	0	1	1
92,1	1	0	1	1	0	1	1	0	0	0	0	0	0	0	1	1
92,3	1	0	1	1	0	1	0	0	1	1	1	1	1	1	0	1
92,5	1	0	1	1	0	1	1	1	1	0	1	1	1	1	0	1
92,7	1	0	1	1	0	1	0	1	0	0	1	1	1	1	0	1
92,9	1	0	1	1	0	1	1	0	1	1	0	1	1	1	0	1
93,1	1	0	1	1	0	1	0	0	0	1	0	1	1	1	0	1
93,3	1	0	1	1	0	1	1	1	0	0	0	1	1	1	0	1
93,5	1	0	1	1	0	1	0	1	1	1	1	0	1	1	0	1

RFTOOLS

Tabela de programação de frequência com prescaller MC12017

	SW1								SW2							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
93,7	1	0	1	1	0	1	1	0	0	1	1	0	1	1	0	1
93,9	1	0	1	1	0	1	0	0	1	0	1	0	1	1	0	1
94,1	1	0	1	1	0	1	1	1	1	1	0	0	1	1	0	1
94,3	1	0	1	1	0	1	0	1	0	1	0	0	1	1	0	1
94,5	1	0	1	1	0	1	1	0	1	0	0	0	1	1	0	1
94,7	1	0	1	1	0	1	0	0	0	0	0	0	1	1	0	1
94,9	1	0	1	1	0	1	1	1	0	1	1	1	0	1	0	1
95,1	1	0	1	1	0	1	0	1	1	0	1	1	0	1	0	1
95,3	1	0	1	1	0	1	1	0	0	0	1	1	0	1	0	1
95,5	1	0	1	1	0	1	0	0	1	1	0	1	0	1	0	1
95,7	1	0	1	1	0	1	1	1	1	0	0	1	0	1	0	1
95,9	1	0	1	1	0	1	0	1	0	0	0	1	0	1	0	1
96,1	1	0	1	1	0	1	1	0	1	1	1	0	0	1	0	1
96,3	1	0	1	1	0	1	0	0	0	1	1	0	0	1	0	1
96,5	1	0	1	1	0	1	1	1	0	0	1	0	0	1	0	1
96,7	1	0	1	1	0	1	0	1	1	1	0	0	0	1	0	1
96,9	1	0	1	1	0	1	1	0	0	1	0	0	0	1	0	1
97,1	1	0	1	1	0	1	0	0	1	0	0	0	0	1	0	1
97,3	1	0	1	1	0	1	1	1	1	1	1	1	1	0	0	1
97,5	1	0	1	1	0	1	0	1	0	1	1	1	1	0	0	1
97,7	1	0	1	1	0	1	1	0	1	0	1	1	1	0	0	1
97,9	1	0	1	1	0	1	0	0	0	0	1	1	1	0	0	1
98,1	1	0	1	1	0	1	1	1	0	1	0	1	1	0	0	1
98,3	1	0	1	1	0	1	0	1	1	0	0	1	1	0	0	1
98,5	1	0	1	1	0	1	1	0	0	0	0	1	1	0	0	1
98,7	1	0	1	1	0	1	0	0	1	1	1	0	1	0	0	1
98,9	1	0	1	1	0	1	1	1	1	0	1	0	1	0	0	1
99,1	1	0	1	1	0	1	0	1	0	0	1	0	1	0	0	1
99,3	1	0	1	1	0	1	1	0	1	1	0	0	1	0	0	1
99,5	1	0	1	1	0	1	0	0	0	1	0	0	1	0	0	1
99,7	1	0	1	1	0	1	1	1	0	0	0	0	1	0	0	1

RFTOOLS

Tabela de programação de frequência com prescaller MC12017

	SW1								SW2							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
99,9	1	0	1	1	0	1	0	1	1	1	1	1	0	0	0	1
100,1	1	0	1	1	0	1	1	0	0	1	1	1	0	0	0	1
100,3	1	0	1	1	0	1	0	0	1	0	1	1	0	0	0	1
100,5	1	0	1	1	0	1	1	1	1	1	0	1	0	0	0	1
100,7	1	0	1	1	0	1	0	1	0	1	0	1	0	0	0	1
100,9	1	0	1	1	0	1	1	0	1	0	0	1	0	0	0	1
101,1	1	0	1	1	0	1	0	0	0	0	0	1	0	0	0	1
101,3	1	0	1	1	0	1	1	1	0	1	1	0	0	0	0	1
101,5	1	0	1	1	0	1	0	1	1	0	1	0	0	0	0	1
101,7	1	0	1	1	0	1	1	0	0	0	1	0	0	0	0	1
101,9	1	0	1	1	0	1	0	0	1	1	0	0	0	0	0	1
102,1	1	0	1	1	0	1	1	1	1	0	0	0	0	0	0	1
102,3	1	0	1	1	0	1	0	1	0	0	0	0	0	0	0	1
102,5	1	0	1	1	0	1	1	0	1	1	1	1	1	1	1	0
102,7	1	0	1	1	0	1	0	0	0	1	1	1	1	1	1	0
102,9	1	0	1	1	0	1	1	1	0	0	1	1	1	1	1	0
103,1	1	0	1	1	0	1	0	1	1	1	0	1	1	1	1	0
103,3	1	0	1	1	0	1	1	0	0	1	0	1	1	1	1	0
103,5	1	0	1	1	0	1	0	0	1	0	0	1	1	1	1	0
103,7	1	0	1	1	0	1	1	1	1	1	1	0	1	1	1	0
103,9	1	0	1	1	0	1	0	1	0	1	1	0	1	1	1	0
104,1	1	0	1	1	0	1	1	0	1	0	1	0	1	1	1	0
104,3	1	0	1	1	0	1	0	0	0	0	1	0	1	1	1	0
104,5	1	0	1	1	0	1	1	1	0	1	0	0	1	1	1	0
104,7	1	0	1	1	0	1	0	1	1	0	0	0	1	1	1	0
104,9	1	0	1	1	0	1	1	0	0	0	0	0	1	1	1	0
105,1	1	0	1	1	0	1	0	0	1	1	1	1	0	1	1	0
105,3	1	0	1	1	0	1	1	1	1	0	1	1	0	1	1	0
105,5	1	0	1	1	0	1	0	1	0	0	1	1	0	1	1	0
105,7	1	0	1	1	0	1	1	0	1	1	0	1	0	1	1	0
105,9	1	0	1	1	0	1	0	0	0	1	0	1	0	1	1	0

RFTOOLS

Tabela de programação de frequência com prescaller MC12017

	SW1								SW2								
	1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8
106,1	1	0	1	1	0	1	1	1		0	0	0	1	0	1	1	0
106,3	1	0	1	1	0	1	0	1		1	1	1	0	0	1	1	0
106,5	1	0	1	1	0	1	1	0		0	1	1	0	0	1	1	0
106,7	1	0	1	1	0	1	0	0		1	0	1	0	0	1	1	0
106,9	1	0	1	1	0	1	1	1		1	1	0	0	0	1	1	0
107,1	1	0	1	1	0	1	0	1		0	1	0	0	0	1	1	0
107,3	1	0	1	1	0	1	1	0		1	0	0	0	0	1	1	0
107,5	1	0	1	1	0	1	0	0		0	0	0	0	0	1	1	0
107,7	1	0	1	1	0	1	1	1		0	1	1	1	1	0	1	0
107,9	1	0	1	1	0	1	0	1		1	0	1	1	1	0	1	0

OBS : “0” indica OFF e “1” indica ON